


High Security Lock Installation

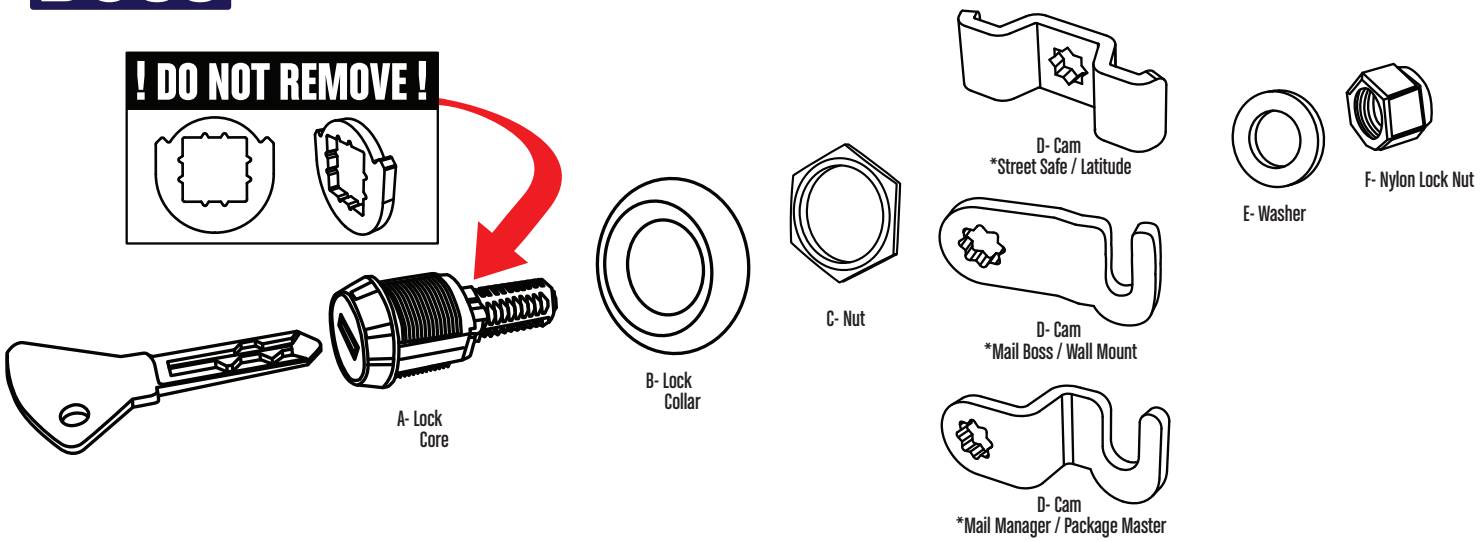

1 Insert the lock core (A) through the lock collar (B) then insert the whole assembly through the hole on your Mail Boss® mailbox and secure it with the large nut (C).

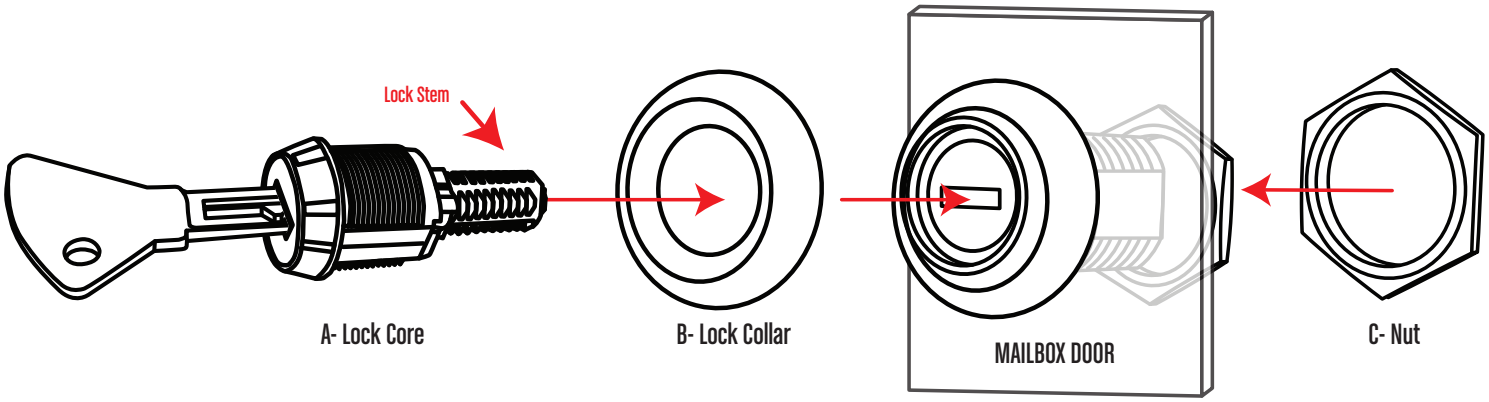


2 Insert the key, and then rotate it clockwise so that the key is vertical - this is the unlocked position.
Place the cam (D) on the backside of the lock, ensuring that it is horizontal - also in the unlocked position.

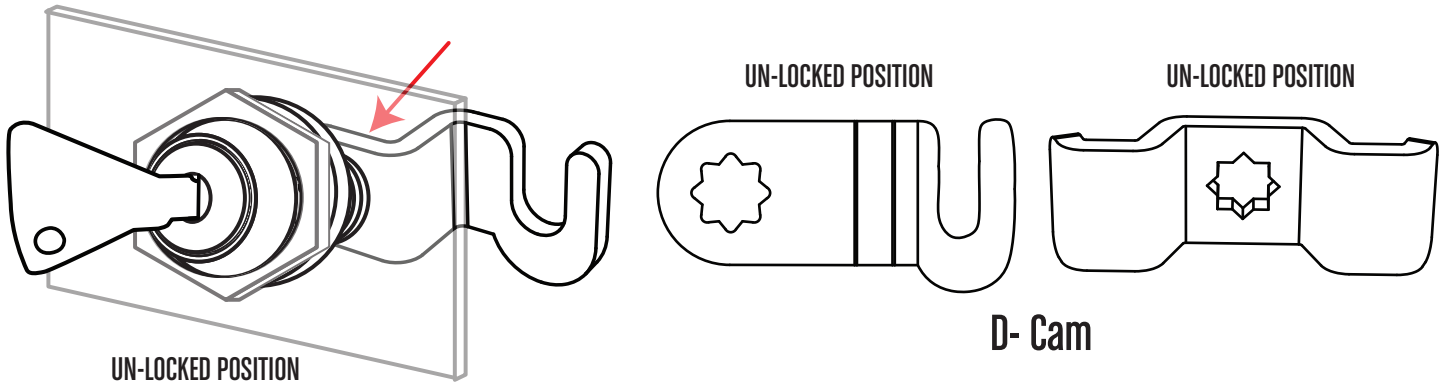

Copyright © 2024 Epoch Design™ All rights reserved


3 Leave the key inserted, and install the Washer (E), and the Nylon Lock Nut (F).
Use a wrench to tighten the Nylon Lock Nut (F) gently until the nut contacts the cam assembly.

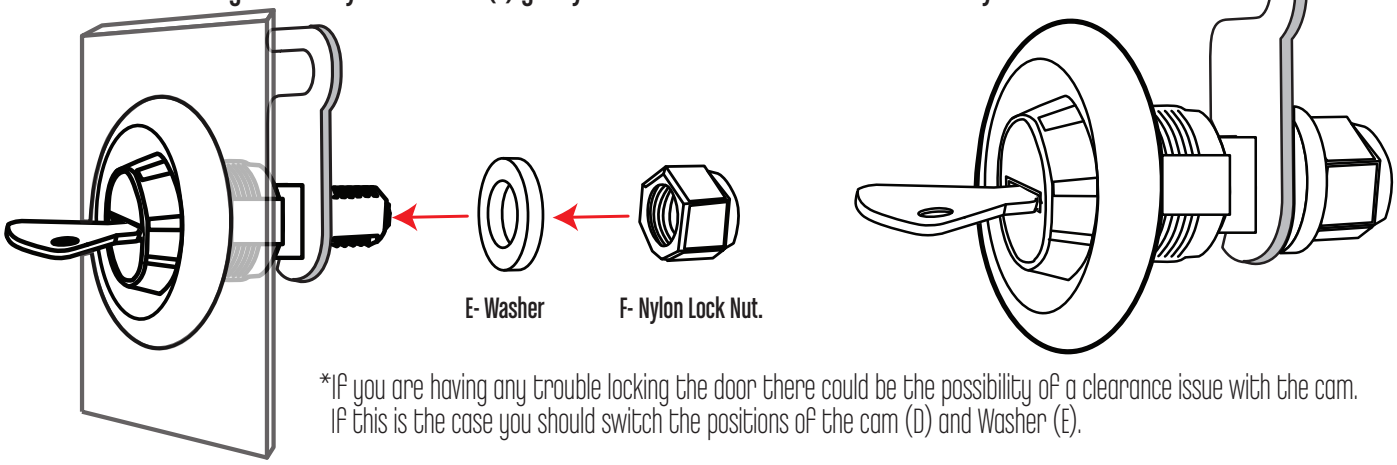


*If you are having any trouble locking the door there could be the possibility of a clearance issue with the cam. If this is the case you should switch the positions of the cam (D) and Washer (E).

MAIL BOSS


ACCESSORY ITEMS AND PARTS AVAILABLE:
WWW.MAILBOSS.COM

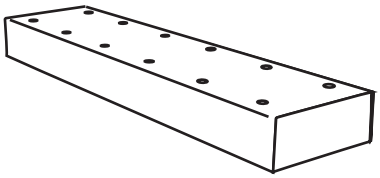


SPREADER BARS
Allows Mounting Of Two, Three Or Four Mailboxes On One Post
Available In All Colors

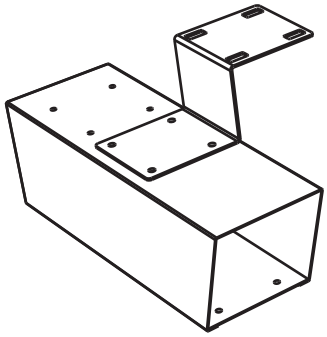


NEWSPAPER HOLDER
Available In All Colors

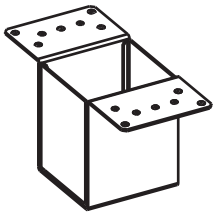

POST HEIGHT EXTENDER
Increase height of posts by 6 inches

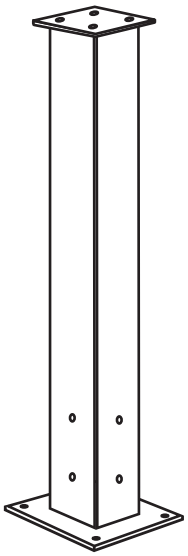


SURFACE MOUNT POST & BASE PLATE
Available In All Colors

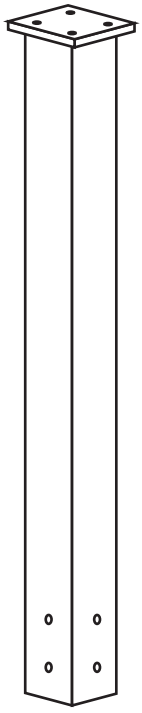

IN GROUND POST
Available In All Colors




LOCK DUST COVER
Protects lock mechanism

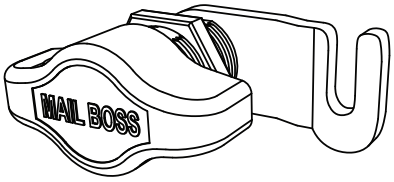


HASP LOCK
Standard padlock compatible



VANDAL PROOF FLEXIBLE FLAG

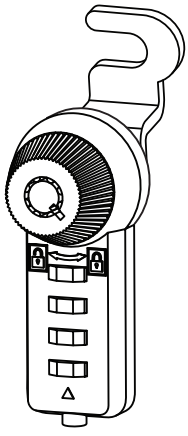

COMBINATION LOCK
Compatible with all mailboxes

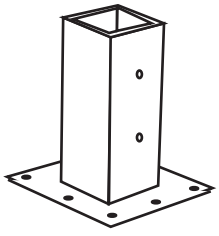

SURFACE BASE PLATE

Have a question?... Need a part ASAP?...1-800-589-7990

Copyright © 2024 Epoch Design™ All rights reserved